

Installation Instructions for Red Rock 4X4 Rocker Guards (07-14 Wrangler JK 4 Door)



PARTS LIST:

1	Driver/Left Rocker Guard Assembly	6	8-1.25mm x 35mm Hex Bolts
1	Passenger/Right Rocker Guard Assembly	6	8mm Lock Washers
6	10mm Nut Plates	6	8mm x 28mm OD x 3mm Flat Washers
6	10-1.5mm x 35mm Hex Bolts	12	6-1.0mm x 25mm Hex Bolts
6	10mm Lock Washers	24	6mm x 22mm OD x 2mm Flat Washers
6	10mm x 34mm OD x 3mm Flat Washers	12	6mm Nylon Lock Nuts

PROCEDURE:

- 1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY. FACTORY INSTALLED OR AFTERMARKET "ROCK RAILS," SIDE STEPS OR RUNNING BOARDS MUST BE REMOVED. ASSISTANCE IS HIGHLY RECOMMENDED.**
- 2.** Start installation on the driver side of the vehicle. Determine if the vehicle has an open floor panel, **(2007-10, Figure 1)**, or threaded holes in the floor panel, **(2010-13, Figure 2)**, for the top tab on the Bracket.
Vehicles with open mounting location: Insert (1) 10mm Nut Plate into the large square opening in the floor panel, **(Figures 3, 4A & 4B)**. Line up the nut with the factory hole.
IMPORTANT: To determine correct mounting hole, find the two holes in the pinch weld. Locate the mid point between the two holes. Line up the threaded nut with the small hole directly in line with the mid point, **(Figure 3)**. This applies to front and rear mounting locations.
Bolt each top tab on the Rocker Guard to the Nut Plate with (1) 10mm x 35mm Hex Bolt, (1) 10mm Lock Washer and (1) 10mm Flat Washer, **(Figure 5)**. Repeat for all mounting locations.
Vehicles with factory threaded holes in floor panel: Bolt each tab on the Rocker Guard to the threaded hole in the floor panel with (1) 8mm x 35mm Hex Bolt, (1) 8mm Lock Washer and (1) 8mm Flat Washer, **(Figures 2 & 5)**.
- 3.** Line up the (3) vertical mounting plates on the Rocker Guard with the (6) factory holes in the pinch weld. Bolt the plates to the **back** of the pinch weld using the included (6) 6mm x 25mm Hex Bolts, (12) 6mm Flat Washers and (6) 6mm Nylon Lock Nuts, **(Figures 5 & 6)**. Leave loose at this time.
- 4.** Adjust the Rocker Guard and tighten all hardware.
- 5.** Repeat **Steps 2 - 4** for passenger Rocker Guard installation.
- 6.** Do periodic inspections to the installation to make sure that all hardware is secure and tight.


To protect your investment, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

For gloss black finishes: Mild soap may be used to clean the Rocker Guard.



(Fig 1) 2007-10 driver side front mounting location


Rear

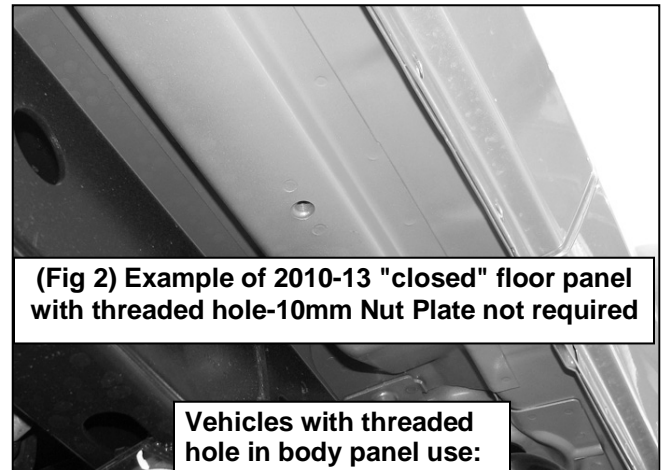

(Fig 2) Example of 2010-13 "closed" floor panel with threaded hole-10mm Nut Plate not required

Vehicles with threaded hole in body panel use:
8mm x 35mm Hex Bolt
8mm Lock Washer
8mm Flat washer

← Rear

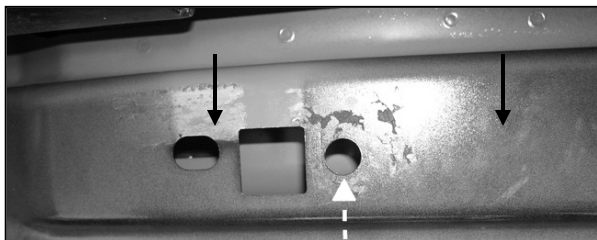

(Fig 3) 2007-10 driver side rear mounting location pictured. Locate the holes in the pinch weld to determine correct hole for 10mm Nut Plate



(Fig 4A) 10mm Nut Plate

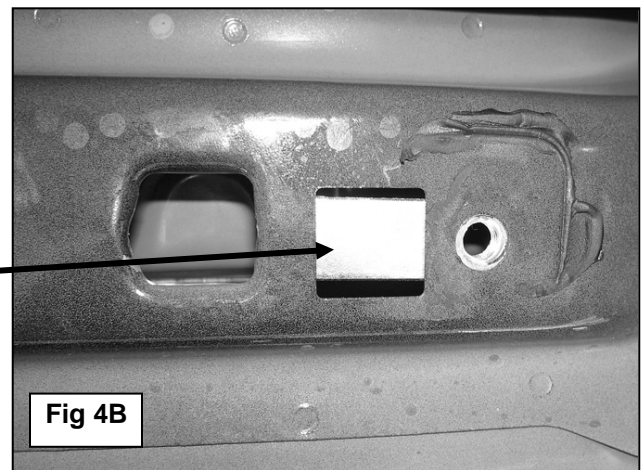


Fig 4B

Driver Side Installation Pictured

(2) 6mm Flat Washers
(2) 6mm Nylon Lock Nuts

2010 - 12 vehicles with threaded hole in floor panel use:
8mm x 35mm Hex Bolt
8mm Lock Washer
8mm Flat washer

07 - 10 with "open" floor panel using 10mm Nut Plate:
10mm x 35mm Hex Bolt
10mm Lock Washer
10mm Flat Washer

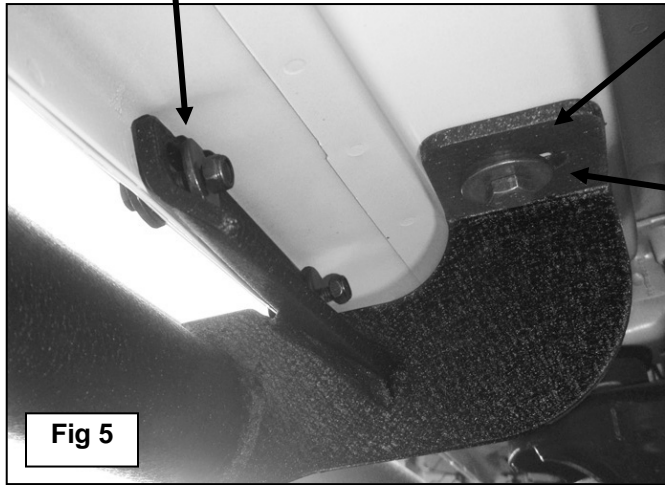


Fig 5

(2) 6mm x 25mm Hex Bolts
(2) 6mm Flat Washers


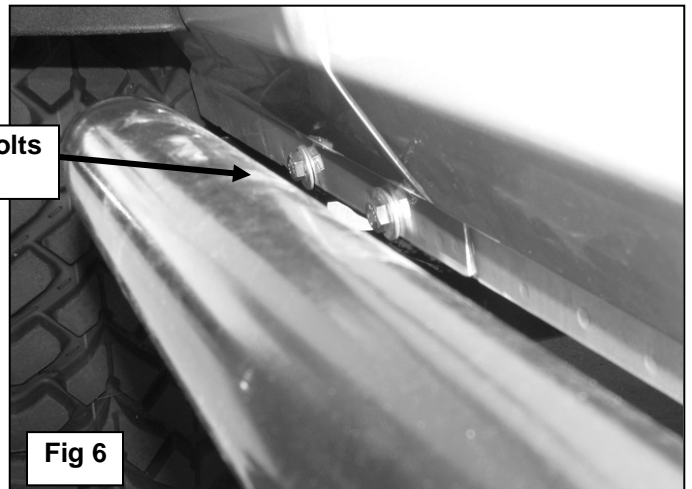


Fig 6

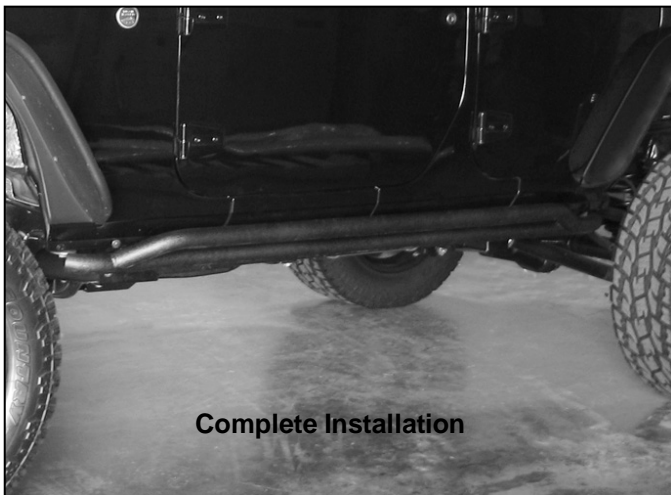

Complete Installation