

## Installation Instructions for RedRock4X4 Cold Air Intake (Wrangler 3.6L)

### TOOLS REQUIRED:

10mm socket  
8mm socket  
Flathead Screwdriver  
Allen Key Set

### Step 1:

Unplug your factory IAT sensor located on the bottom of the intake tube.



### Step 2:

Slide the PCV hose off of the factory air box.



### Step 3:

Remove the (2) 10mm bolts holding the intake to the fan shroud.



### Step 4:

Using a flathead screwdriver, remove the hose clamp holding the intake tube to the throttle body.




### Step 5:

Pull the entire intake assembly up and away from the vehicle.




**Step 6:**

Using the (6) supplied nuts and screws, assemble the new hear shield as shown.

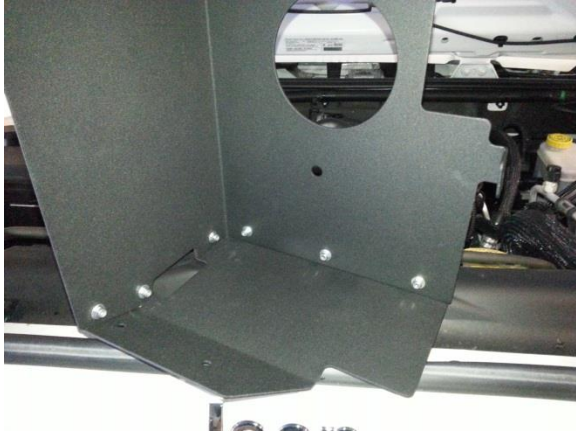


**Step 9:**

Install the heat shield using the factory mounting positions and secure with bolts.

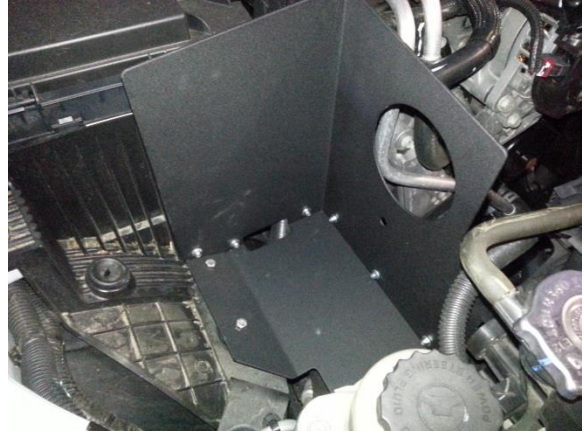

**Step 7:**

Add the supplied screws and spacers to the heat shield for mounting in the factory position.

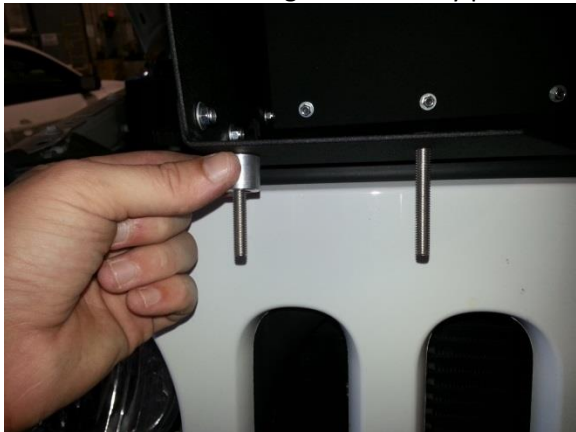


**Step 10:**

Add the supplied rubber gaskets to the top of the heat shield and in hole for the intake.



**Step 8:**

Remove the 8mm screw holding the fan shroud to the radiator.

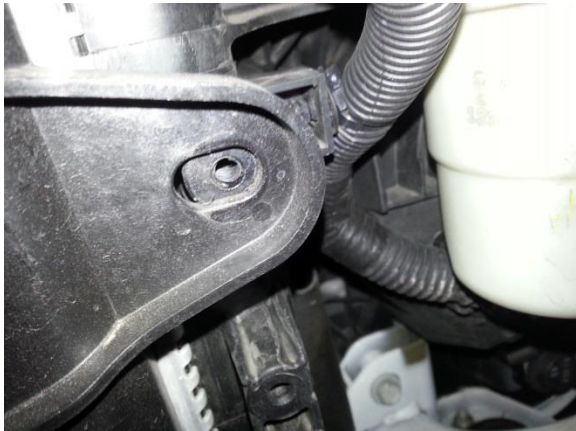

**Step 11:**

Remove of OEM IAT sensor and transfer it over to the new intake tube noting position.



**Step 12:**

Install the supplied coupler to on the intake and the throttle body and secure it on the vehicle.



**Step 15:**

Using the supplied hose tie downs, re-secure the coolant overflow hose to the fan shroud.



**Step 13:**

Reinstall the factory PCV hose onto the new intake tube and secure with new clamp.



**Step 14:**

Install the new filter and secure it into position using the supplied clamp.

