



Jeep Wrangler Sound Deadening Headliner

Please read before Installing:

This kit is designed to fit Jeep Wranglers equipped with factory hardtops. One person can install the front panels over the driver and passenger seats (JK Models). However, it is recommended that a minimum of 2 people install the panels on the back part of the hardtop, as they are large (JK & TJ Models). Lay the parts in place with the paper release liner left in place to note its position and where it will be installed. Once the adhesive contacts a clean surface, it is extremely difficult to remove the adhesive. Be sure the part is in the position desired before adhering it!

Installation Instructions

1.) Remove the hardtop from vehicle and place on the floor in an inverted position as shown in figure 1 below. – Placing the hardtop on a blanket is recommended to protect it from scratches.



Figure 1



Figure 2

Figure 1 – Hardtop removed and inverted (4 Door Shown) 2007 & Up

Figure 2 – Hardtop removed and inverted 1997-2006

2.) Once the hardtop is removed, clean the inside surface of the hardtop with Isopropyl alcohol to ensure a good adhesive bond. Note: The adhesive will not stick properly to a dirty surface.

3.) Install the foam “filler strips” in the molded ribs to ensure a smooth installation of the headliner. Without the “filler strips”, the headliner will conform to the ridges in the top leaving an uneven appearance. Before peeling the release liner on the strips, fit them into the ribs to properly locate them. Trim if necessary.



www.BoomMat.com



Figure 3. Center part from one side

4.) Remove the paper release liner from the back of the part about to be installed. Once the liner is removed, center one side as shown in Figure 3.

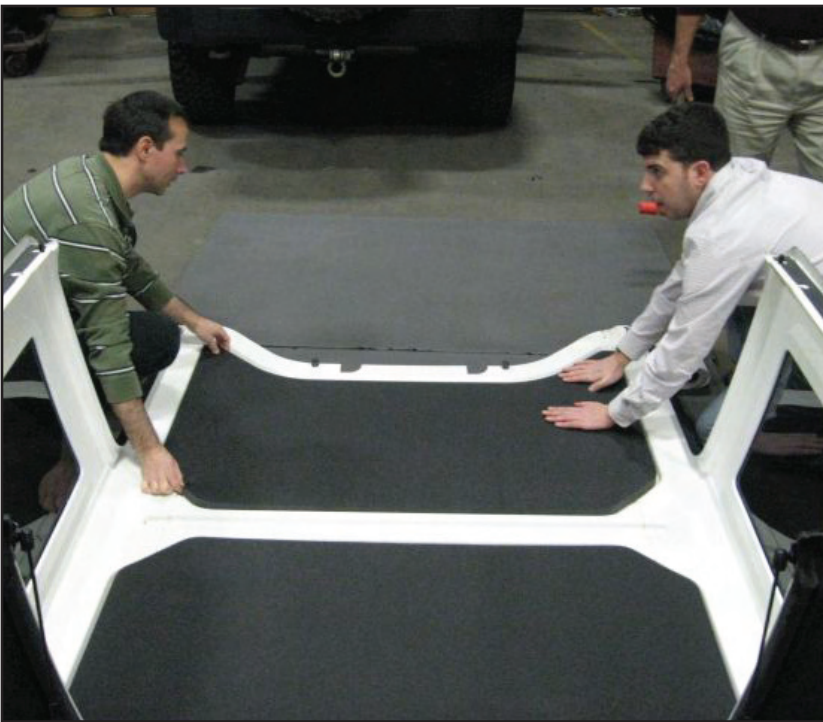


Figure 4. Lay panel in place by applying gentle pressure

5.) Once the starting edge is adhered, lay down the rest of the part by applying gentle pressure with your hands as shown in Figure 4.



Figure 5. Apply pressure with roller

6.) Once the parts have been installed, apply pressure with a roller as shown in Figure 5 below. Note – Roll the part on in two directions (upwards / downwards and left /right) Note: Flooring roller shown, can use Boom Mat Installation Roller Part # 050218 or press in place by hand.



Figure 6

7.) Once all parts are installed, allow parts to sit in the top inverted for 25 minutes. (See Figures 6 and 7). This will allow the adhesive to set properly. Once the parts have set, you are ready to install the top back on your Jeep.

Figure 6 – Hardtop removed and inverted with headliner installed. (4 Door Shown) 2007 & Up

Figure 7 – Hardtop removed and inverted with headliner installed. 1997-2006

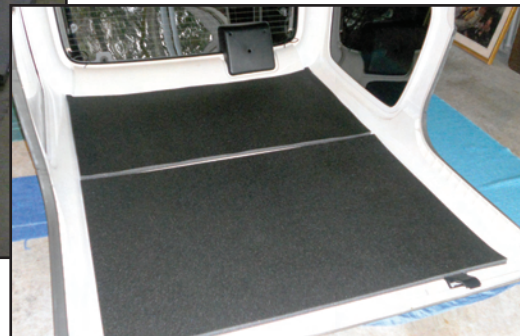


Figure 7


NOTE: 2003 TO 2006 TJ models with factory speaker pods will have cutouts to fit around pods. (not shown)



www.BoomMat.com

Boom Mat

- Eliminate unwanted engine & road noise
- Enhance audio performance
- Dampen vibrations
- Easy peel & stick application
- 1/16" thick

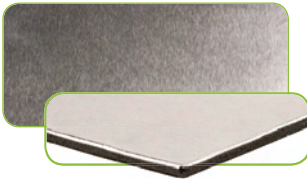


Boom Mat Spray

- Spray application for hard to reach areas
- Eliminate unwanted engine & road noise
- Dampen vibrations
- Spray multiple coats for desired thickness




Under Carpet (UC)

- Perfect to use over Boom Mat
- Insulate your interior from heat & cold
- Provide additional sound deadening
- 3/8" thick

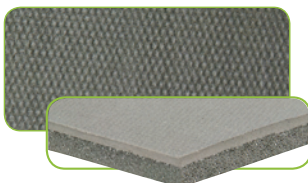


Under Carpet Lite (UC Lite)

- Multi-layered waterproof composite material
- Lightweight
- Superior heat & noise barrier
- Perfect to use over Boom Mat
- 1/2" thick

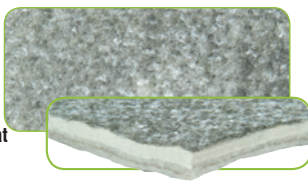


Leather Look Sound Barrier

- Embossed leather grain
- Finishing touch for your interior
- Insulate interior from unwanted heat & noise
- Moisture resistant
- 5/16" thick

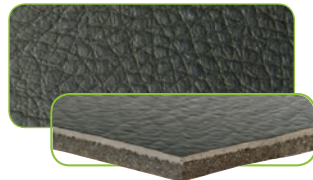


Floor & Tunnel Shield II (FT II)

- Peel & stick application
- Withstands 1750° F direct continuous heat
- Use to shield & reflect unwanted heat
- 3/16" thick

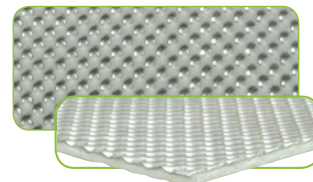

Under Hood Thermal Acoustic Lining

- Insulate from heat while reducing unwanted noise
- Peel & stick application
- Protect your paint
- 3/4" thick

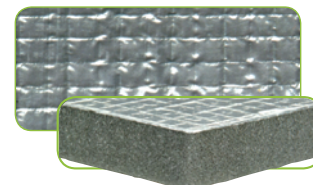

Ny-Trex Nitrous Oxide Systems

The most complete Nitrous Oxide Systems available



Cryo2™ Cryogenic Intake Systems

Cools down and improves airflow for greater horsepower



Exhaust Wrap & Accessories

Lowers underhood temperatures 50%!

Locking Ties

Securely fasten wrap

HT Silicone Coating

Protects wrap




Protect-A-Boots Protect-A-Wire

Protect spark plug boots and wires up to 1200° F!



Titanium Turbo Shield

Ultimate means of reducing turbo lag and protecting engine components from turbo heat

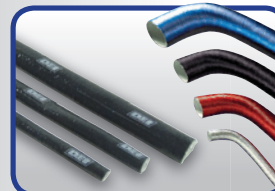

Line and Hose Protection

Protect lines and hoses from searing engine component heat!



Radiator Relief Performance Coolant Additives

Lowers operating temperatures up to 30° F!