

KC HILITES 3 INCH C3 LED SQUARE – Installation Guide

Installation Time: 30 Minutes

Tools Required:

- ✓ Phillips Screwdriver
- ✓ Flathead Screwdriver

Installation Instructions:


1. Confirm all parts are included in kit. Remove the fuse from wiring harness.




2. Attach lights to mounting brackets (not supplied). Tighten and secure.



3. Connect lights to wiring harness and run harness into engine compartment. Connect yellow wire to positive battery terminal. Connect Black wire to automobile chassis. Ensure wire harness is not pinched or rubbing against sharp metal surfaces.

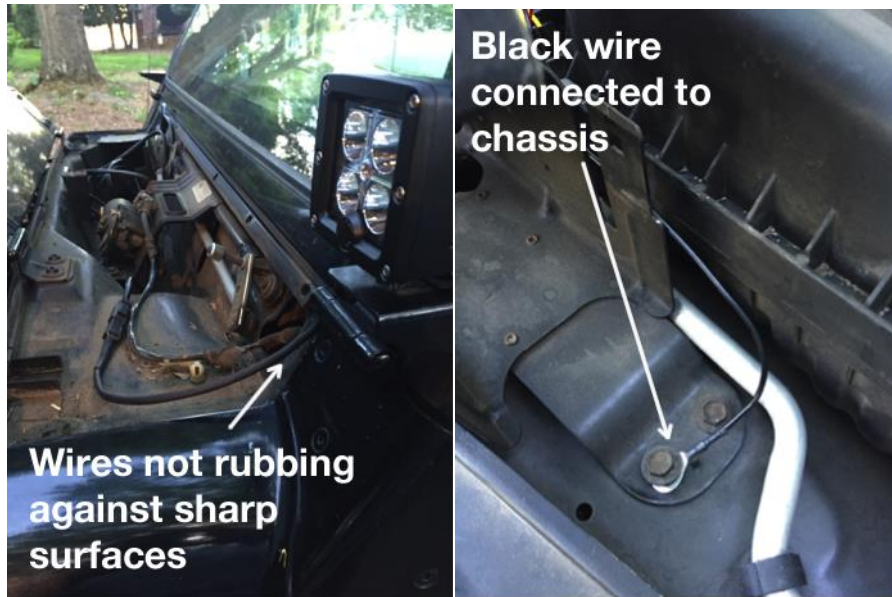

4. Run cables through firewall and behind dash. Mount switch into preferred location in dash and connect the RED wire to the switch terminal marked LOAD. Connect the YELLOW terminal to the switch marked SUPPLY. Attach the BROWN wire to the terminal marked EARTH. Attach the other end of the BROWN wire to a grounded metal surface behind the dash (usually a screw mounted to the firewall).

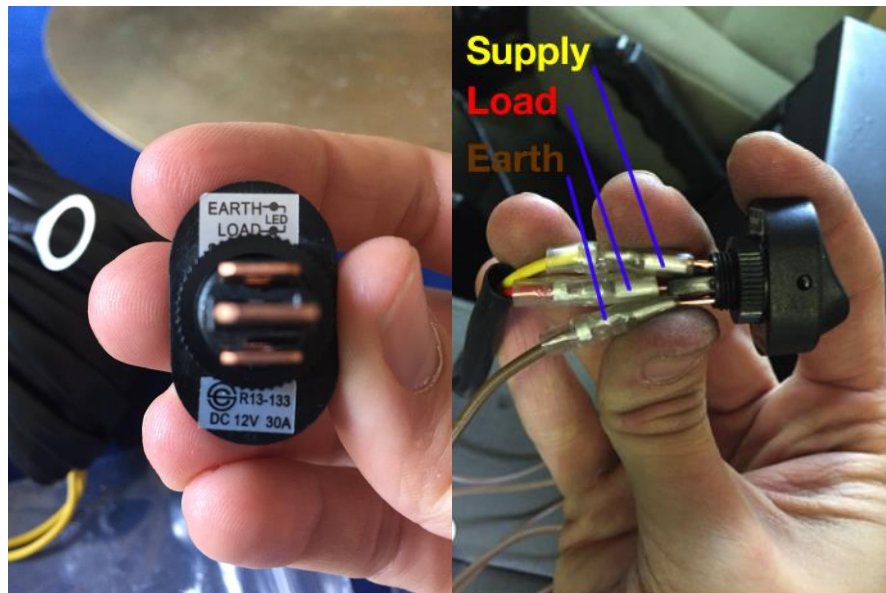

5. Slide switch into dash and secure.
6. Insert fuse and test lights.

Finished Result:



Installation Instructions Written by ExtremeTerrain Customer Matthew Garvin April 16, 2016