

# Installation Instructions





Description: RedRock 4x4 Stubby Front Bumper w/Stinger, Fog Light Provisions, and Winch Mount

No.	Description	Qty	Size	No.	Description	Qty	Size
1	Bumper grille guard	1		5	Spring Washer	8	D10
2	Hex Nut	8	M10	6	Increase the flat washer	8	D10



**Installation Steps:**

1. Reference parts lists and installation drawings, check the accessories are complete.
2. Remove the factory bumper & the frame bracket, to fix the bumper to the frame with the screws.  
(Fig.1 & Fig.2 & Fig.3AB)
3. All bolts are screwed on and adjust the best position to slowly tighten all bolts.
4. Check for leakage on the bolts, make sure tighten all the bolts.

**Installation Diagram:**

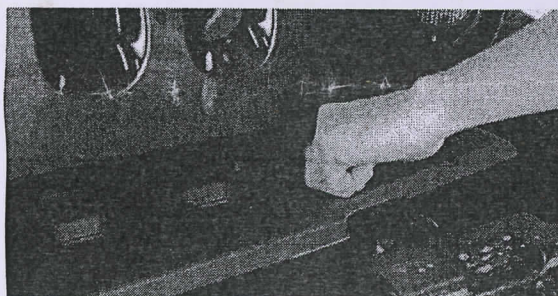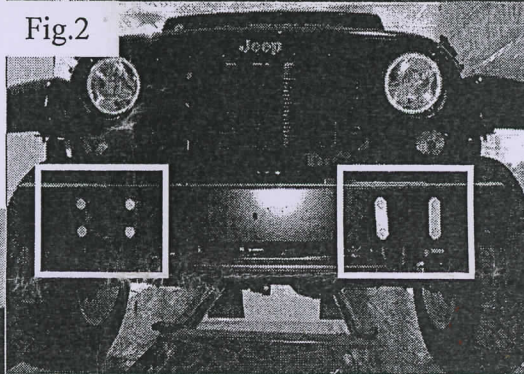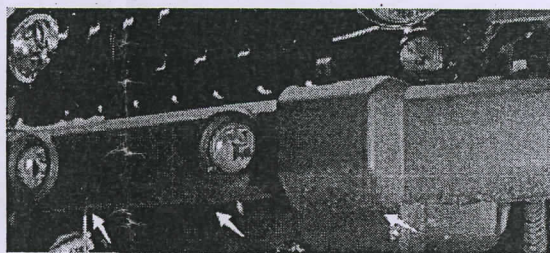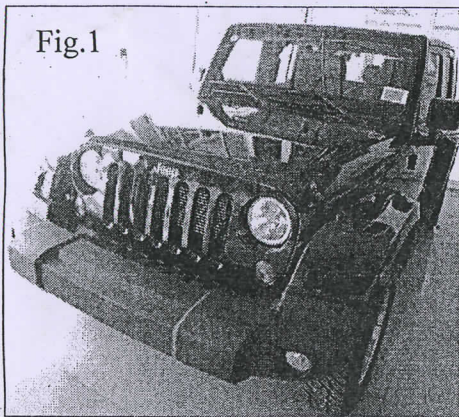

Remove the plastic bumper & the frame bracket (Fig.1 & Fig.2 & Fig.3AB)

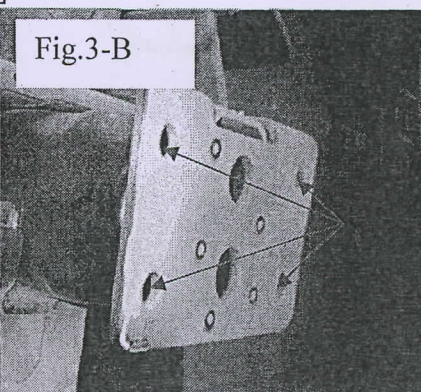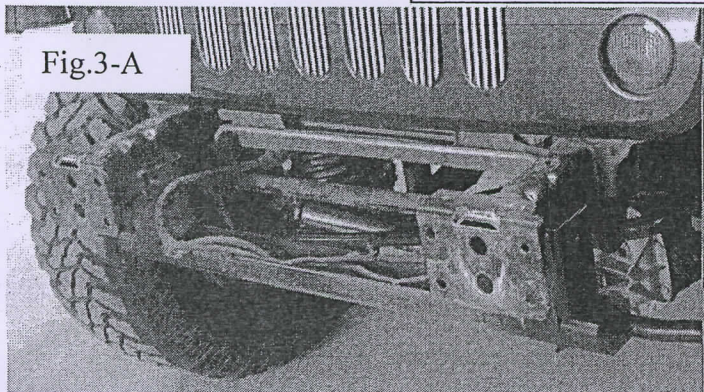

Place the bumper onto vehicle and install washers and locknuts. (Fig.4-AB)

Fig.4-A


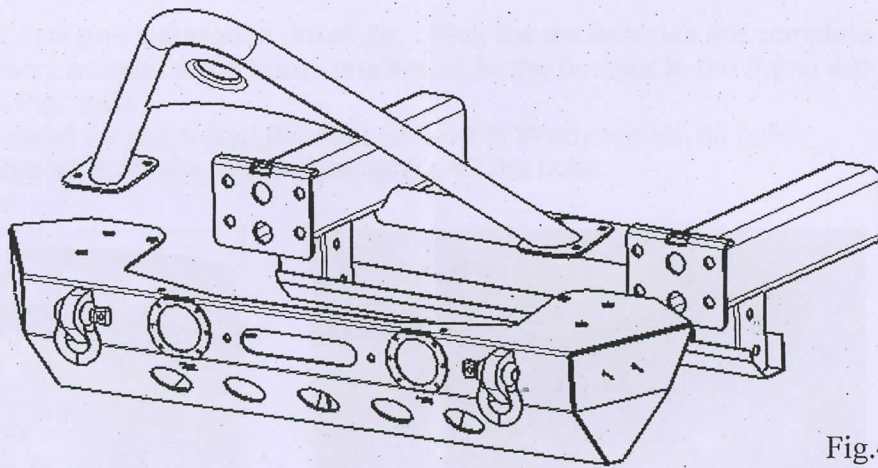


Fig.4-B

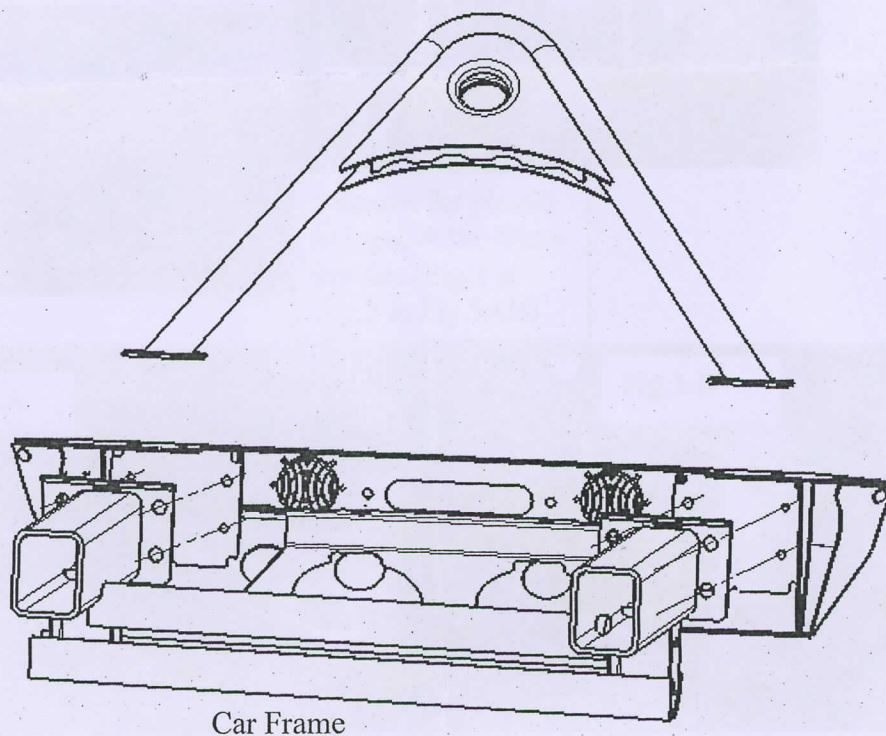

Car Frame