

AFE Magnum FORCE Stage-2 Pro DRY S Cold Air Intake System (07-11 3.8L Wrangler JK) Installation Guide

Installation Time: 1 Hour

Tools Required:

- ✓ Flathead Screwdriver
- ✓ Socket Wrench
- ✓ M6 Socket

Installation Instructions:

1. Remove all contents from packaging.




2. Loosen the clamp holding the intake tube to the throttle body.



3. Loosen the clamp holding the intake tube to the air box.



4. Disconnect the temp sensor wire.

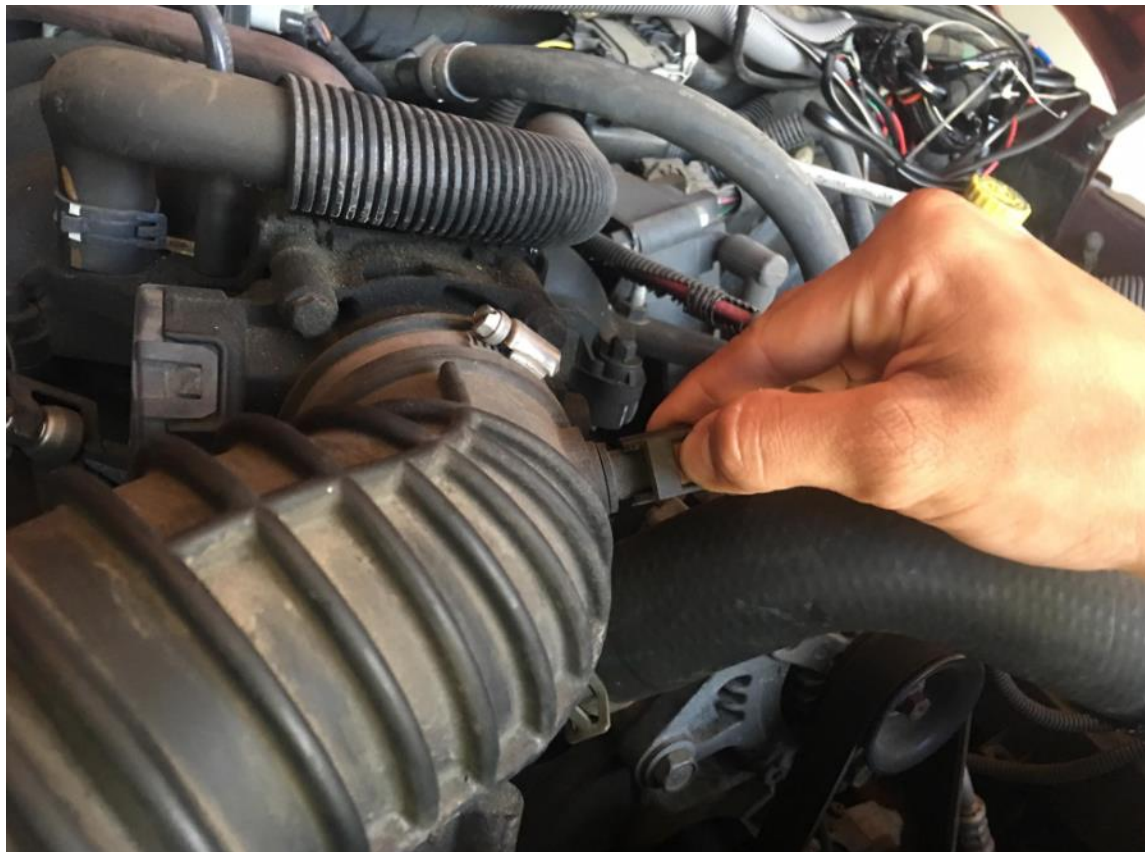


5. Remove the intake tube.



6. Disconnect the crank case vent hose at the back of the air box.



7. Pull the air box straight up to remove it.

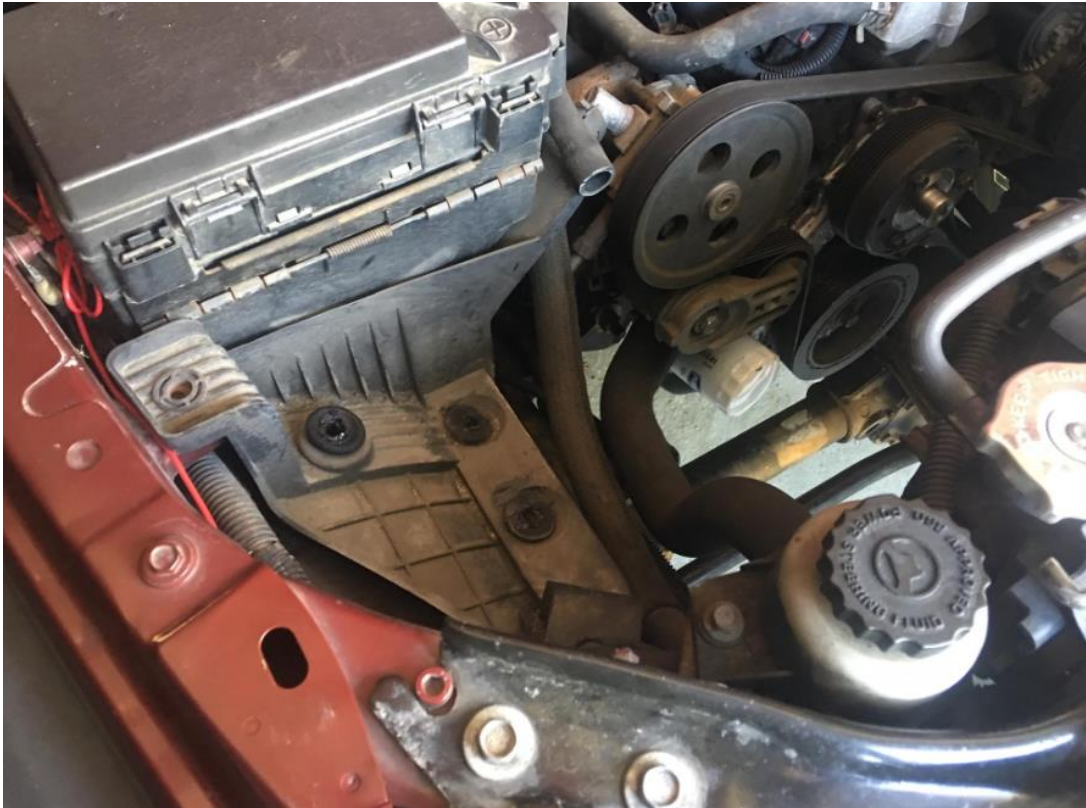

8. Take the urethane spacers and place them onto the bottom of the air intake housing, flat side facing toward the housing.



9. Remove the M6 bolt from the area circled in the picture and save it for a later step.



10. Put the trim on the air intake housing, place the housing into the vehicle, and re-install the M6 bolt that was removed in step 9.



11. Install the aFe grommet for the temp sensor into the intake tube.



12. Install the coupling and clamps onto the intake tube, along with the temp sensor.




13. Attach the intake tube into the throttle body and tighten the clamps.



14. Use the provided M6 bolts and M6 washers to attach the intake tube to the housing.



15. Install the crank case vent hose onto the intake tube and tighten the small clamp. Install the filter.

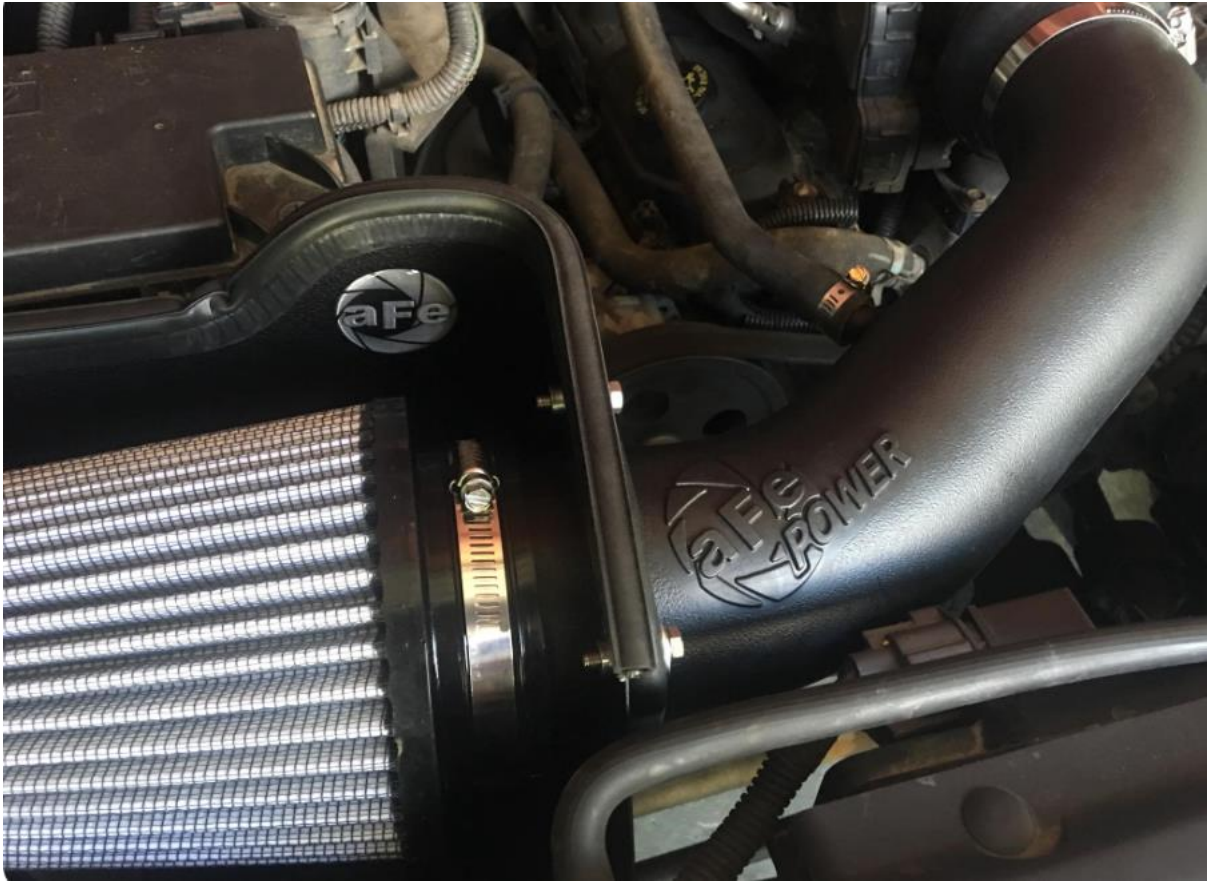

16. Finished!

Installation Instructions Written by ExtremeTerrain Customer Thomas Sandoval 7/11/2017