

2007-2014+ Jeep Wrangler 20" Light Bar Hood Mount Brackets

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance, feel free to call us at: 1-800-357-9261
Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)
Contact your PUTCO dealer for other quality accessories.

Please read all instructions before installation and to verify that all parts are included.

Kit For Putco 10020 Light Bar Only

KIT CONTENTS:	
Description	Qty.
Light Bar Driver Side Bracket	1
Light Bar Passenger Side Bracket	1
M8 x 20mm Bolts 5mm Hex	4

Tools Needed:

- T 40 Torx Bit
- 5mm Hex Bit
- Ratchet

Bracket Installation

1. Remove bracket kit from packaging. Check to see if all parts from above kit contents table are included.
2. Remove Bolts shown in **Figure 1**. Use **T40 Torx Bit** to remove.
3. Install brackets using supplied hardware. Tighten Down Using **5mm Hex Bit**. Passenger side orientation is shown in **Figure 2**.
4. Mount 20" light bar between brackets. (**These brackets are designed for Putco 10020 Light Bar, Refer to Putco Light Bar Installation Instructions for mounting and wiring light bar.**)

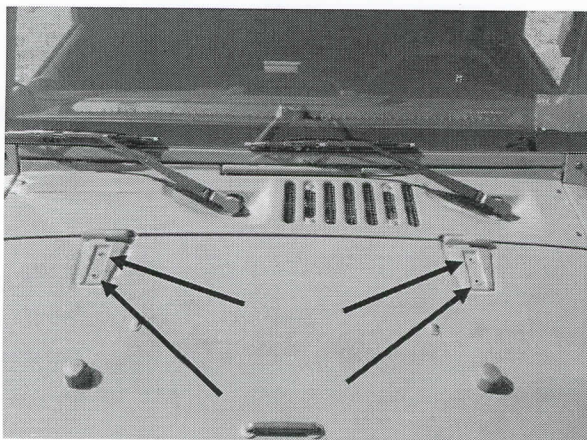


Figure 1

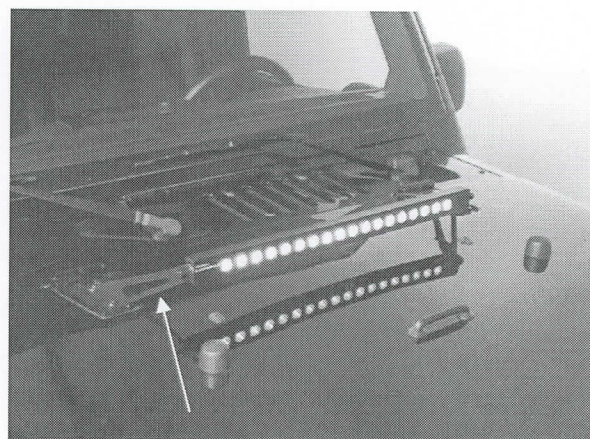


Figure 2

LIMITED 90 DAY WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.