



Bill of Materials

1	31in LED Light Bar	1	Cliffride cowl	1	LED Light wire harness
1	Cowl bracket	2	Phillips screws	2	Plastic washers

Tools Needed

> Small flathead and phillips screwdrivers >> Needle nose pliers >> T30 torx bit >> 13mm wrench or socket <

Check fit all products before doing any body work or modifications if there is an issue contact us first

1. Remove the four T30 Torx bits holding the cowl in place. **Fig. A**
2. Remove the plastic caps covering the wiper hardware. **Fig. B**
3. Remove the 13mm nuts holding the wipers in place. **Fig. C**
4. Remove the wipers by pulling up and straight out. **Fig. D**
5. Lift the hood and remove the two tree rivets holding the cowl screen in place. **Fig. E**
6. Close the hood and remove the factory cowl. **Fig. F**
7. Using a flathead screw driver gently start to remove the tree rivets. **Fig. G**
8. Once the tree rivet is lifted enough remove it with a pair of needle nose pliers. **Fig. H**
9. Remove the four 13mm bolts from hood bracket. **Fig. I**
10. Reinstall the factory cowl vent screen and install the cowl bracket loosely so it can be moved side to side. **Fig. J**
11. Test fit the cowl and note the measurements of the cowl bracket. **Fig. K**
12. Tighten the four 13mm hood bracket bolts and install the supplied light bar to the bracket. **Fig. L**
13. Attach the cowl to the cowl bracket using the 2 phillips screws and plastic washers provided **Fig. M**
14. Tighten the cowl in place using the four T30 Torx screws. **Fig. N**
15. Attach the wipers in place using the factory hardware. **Fig. O**
16. Install the factory wiper covers. **Fig. P**
17. Install the factory tree rivets into the cowl screen. **Fig Q**

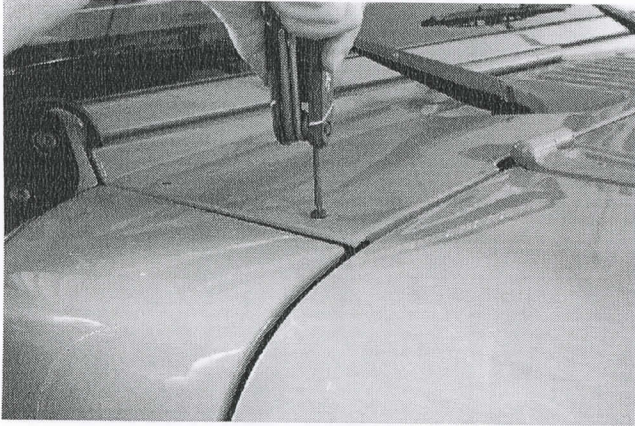


Fig. A

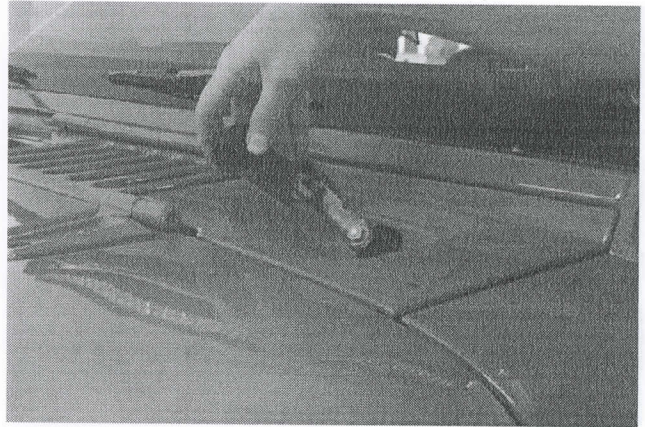


Fig. B

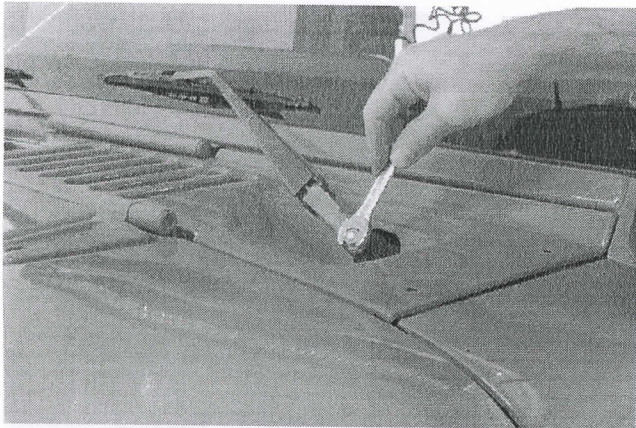


Fig. C

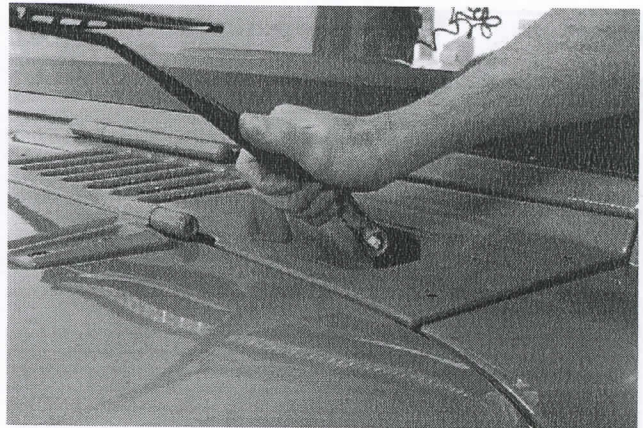


Fig. D

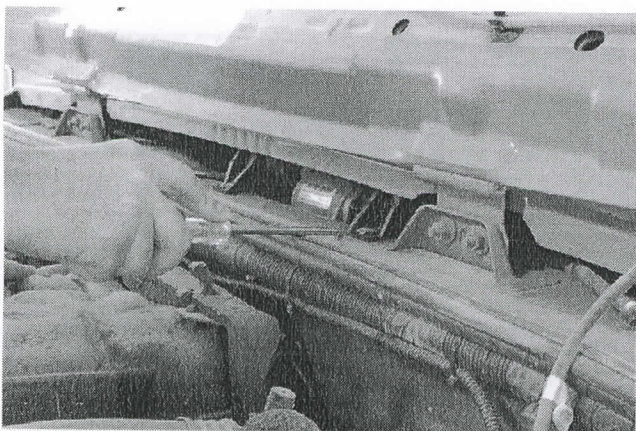


Fig. E

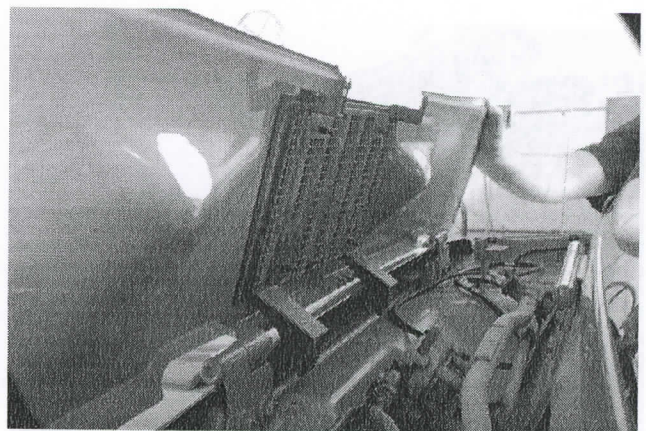


Fig. F

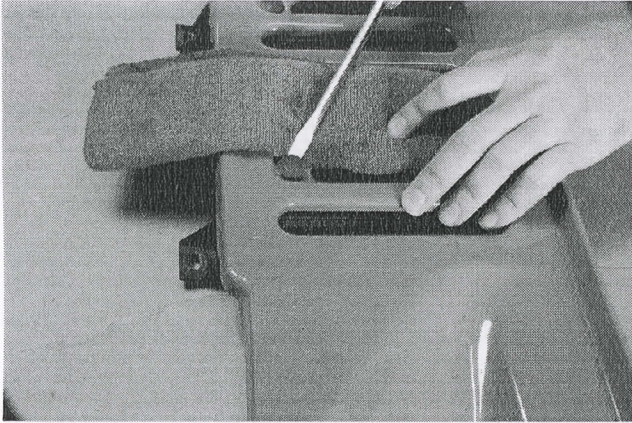


Fig. G

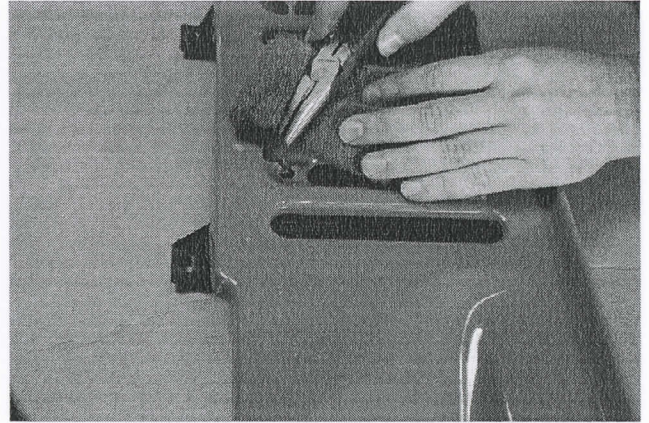


Fig. H

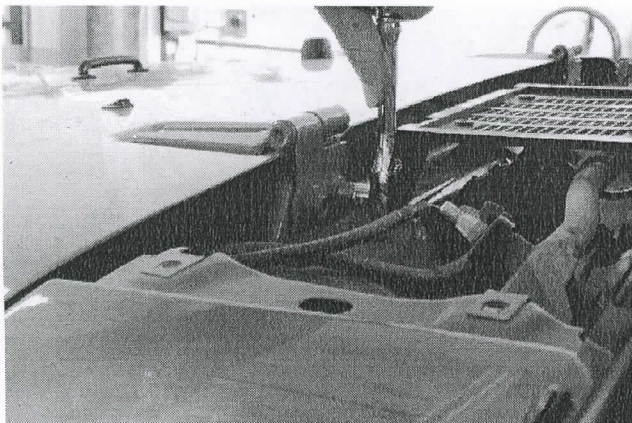


Fig. I

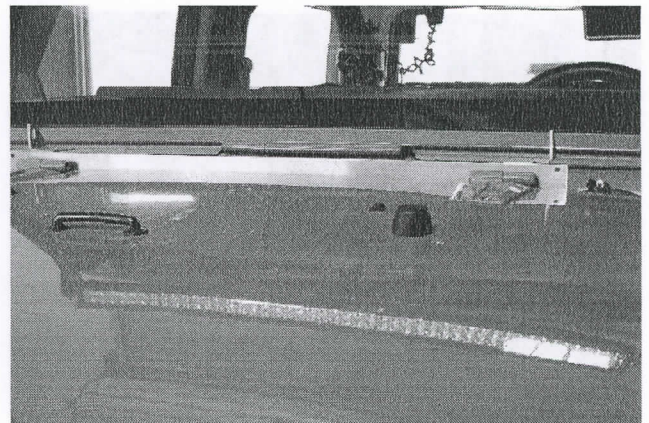


Fig. J

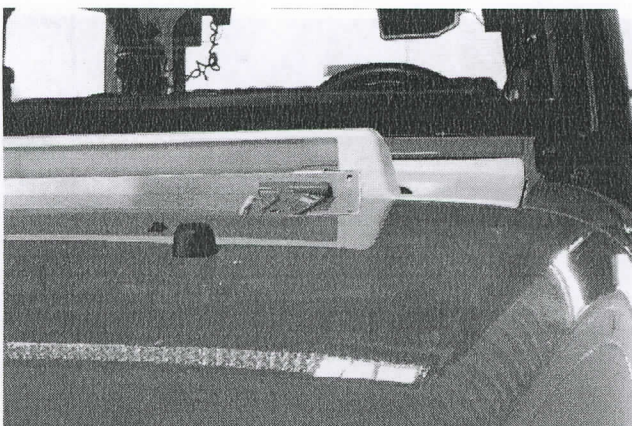


Fig. K

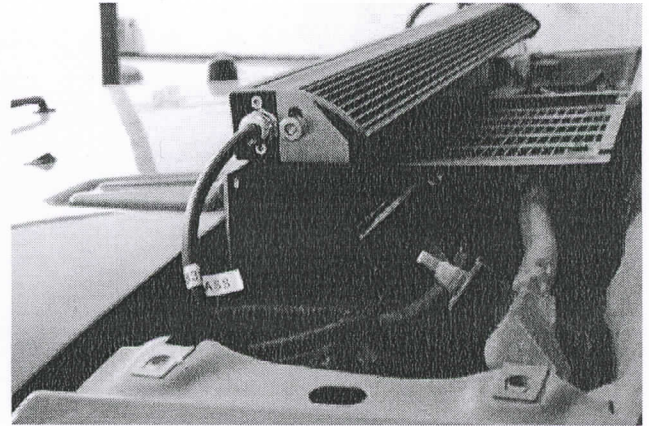


Fig. L



Bill of Materials

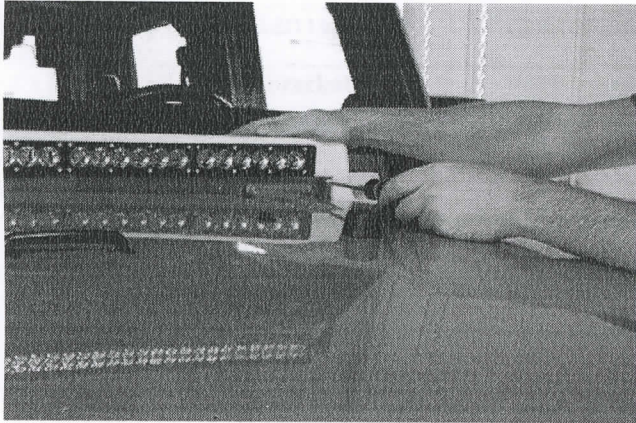


Fig. M

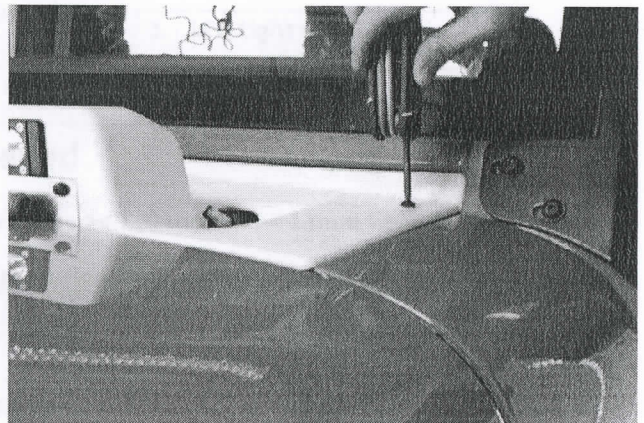


Fig. N

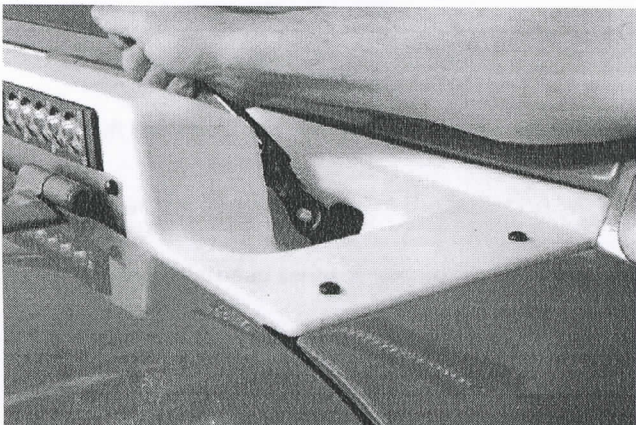


Fig. O

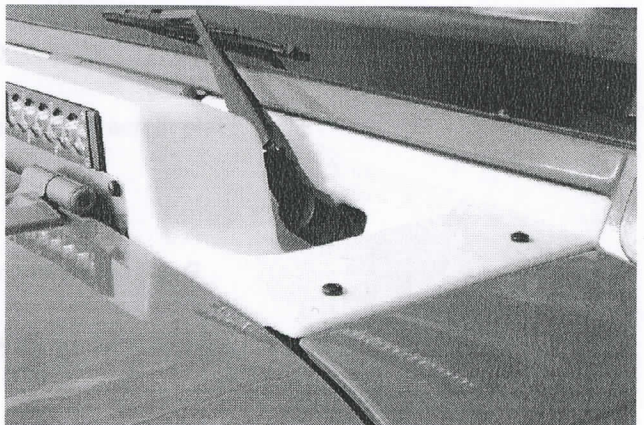


Fig. P

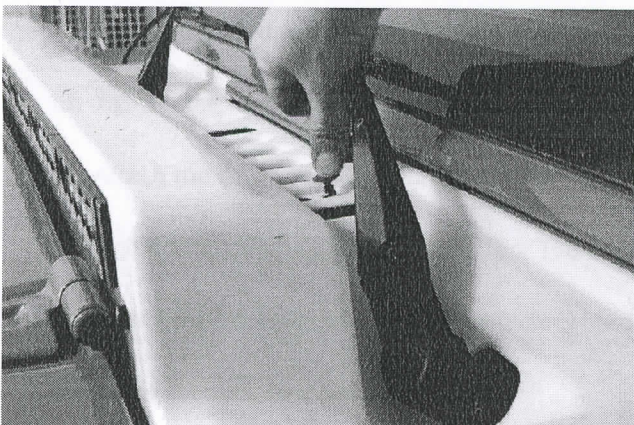


Fig. Q

INS 19003

Cliffride - Rancho Cucamonga, CA 91730 - Tech@cliffride.com

05/9/16



Fig. 1



Fig. 2



Fig. 3



Fig. 4



Fig. 5