



Floor Liner Installation Instructions

These Floor Liners have been designed specifically to fit your vehicle. To insure the correct fit it is necessary to remove your vehicles factory floor mats before installing your new floor liners.

- 1- Remove factory floor mats.
- 2- Place new Floor Liner into place.
- 3- If your vehicle has retention hooks, be sure they are installed into the provided holes.
- 4- Your new Floor Liners may come with Velcro pre-applied on the back to insure they will not slip. If applicable determine where the Velcro will adhere. Clean the contact area, and adhere.

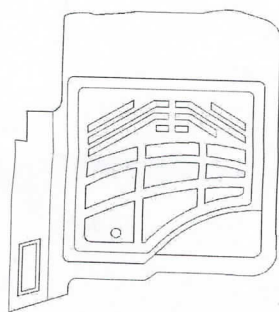

Driver's side

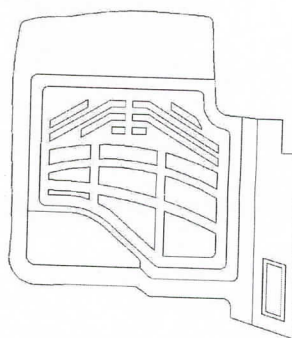

Passenger's side

CLEANING INSTRUCTIONS: Wash with warm water and a mild soap solution, using a soft, clean cloth or sponge. Avoid any oil based product that is designed to bring out a shine, as they will make the new Floor Liners slippery.