

Delta 3088 Series 3.5 in. Xenon Bumper Fog Light Kit

Installation Guide for Jeep Wrangler 2-Door JK

Installation Time: < 1 Hour

Tools Required:

- ✓ Phillips Screwdriver
- ✓ Box Cutter or Knife for Packaging

Ensure that all equipment and hardware are included before beginning installation.

Installation Instructions:

1. Use a box cutter or knife to carefully open the cardboard box.
2. Once the box is open, make sure both fog lights and the converter harness are present (Figure A).



Figure A

3. Remove the fog lights from their packaging.
4. Unclip the wiring harness from the driver's side OEM fog light (Figure B).



Figure B

5. Remove the four screws holding the OEM fog light mount in place (Figure C).



Figure C

6. Once all four screws are removed, remove the OEM fog light from the housing (Figure D).

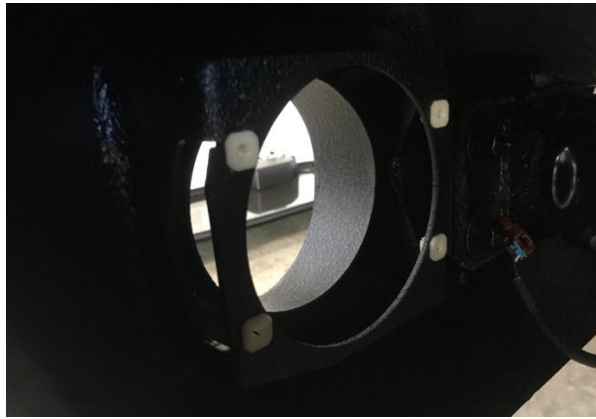


Figure D

7. Align the Delta 3088 Series fog light with the mounting screw holes and replace the four screws (Figure E).



Figure E

8. If your vehicle is 2010-2017, connect fog light wiring harness to converter harness (included) (Figure F) and connect converter harness to the Delta 3088 Series fog light (Figure G).

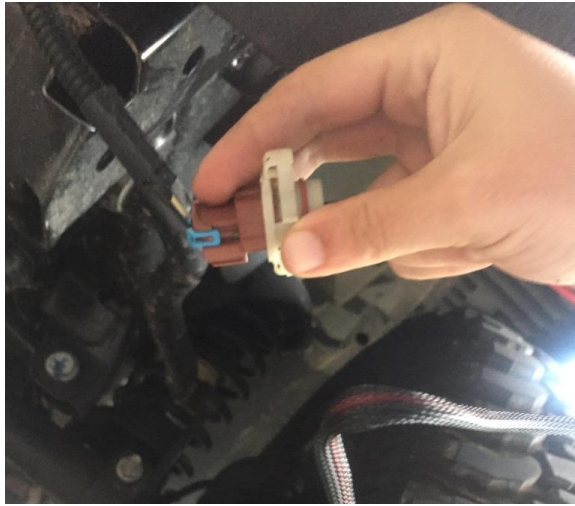


Figure F


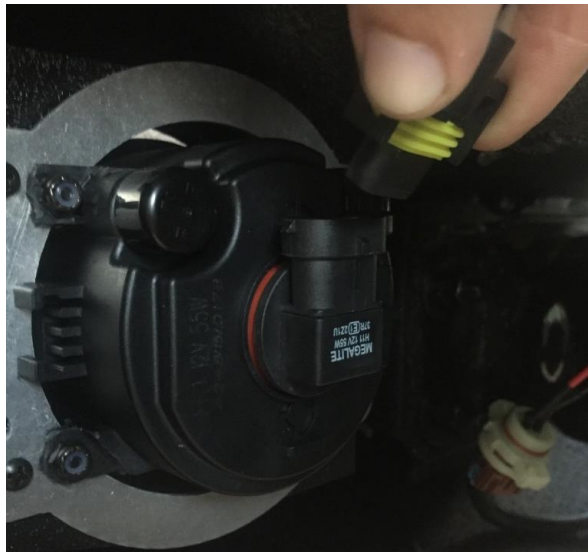


Figure G

9. Repeat steps 4-8 on the passenger's side.



Before

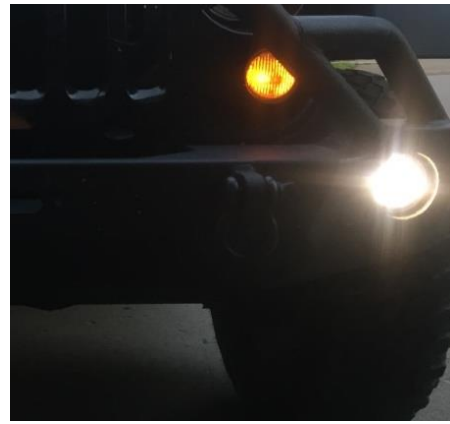

After

Installation Instructions Written by ExtremeTerrain Customer J. Sandlin 05/09/2017