

07+ Jeep Wrangler Boss Bar Installation Instructions

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance feel free to call us at: 1-800-357-9261

Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)

Contact your PUTCO dealer for other quality accessories.

Please read all instructions before installation and to check to see that all parts are included.

KIT CONTENTS:	
Description	Qty.
Driver Bar	1
Passenger Bar	1
Driver Front / Middle Bracket (2080)	2
Passnger Front / Middle Bracket (2081)	2
Driver Rear Bracket (2094)	1
Passenger Rear Bracket (2095)	1
1/4"-20 x 1" Black Bolt	6
1/4"-20 Lock Nut	6
Black 1/4" SS Washer	6
M8 Hex Bolt (704)	6
M8 Hex flange bolt	24

Tools Needed:

- 7/16", 1/2" Wrench
- 13mm Wrench

Boss Bar Installation

1. Remove Boss Bars from packaging. Check to see if all parts from above table of kit contents are included.
2. **Factory running boards need to be remove prior to installation, if equipped. Supplied bracket will mount in factory locations.**

Driver Side Installation

3. Install front bracket in front location. (Figure 1) Use M8 Hex Bolt and 1/4"-20 hardware to mount bracket, (Figure 2) leave loose.
4. Install middle bracket in middle location. (Figure 3) Use M8 Hex Bolt and 1/4"-20 hardware to mount bracket, (Figure 2) leave loose.
5. Install rear bracket in rear location. (Figure 4) Use M8 Hex Bolt and 1/4"-20 hardware to mount bracket, (Figure 2) leave loose.

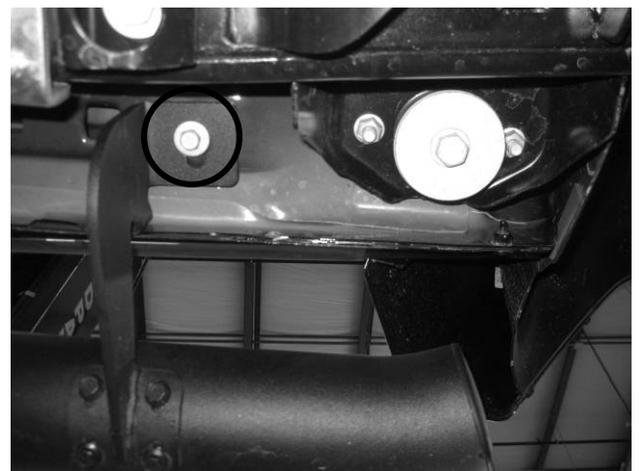


Figure 1

LIMITED 90 Day Limited WARRANTY

Putco guarantees it's Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.

03/17/2013

6. Attach the step tube to all three brackets using (4) M8 flange bolts on each bracket.
7. Tighten all bolts to secure bar.

Passenger Side Installation

8. Repeat steps 3-7 for installation of passenger side step. Enjoy!!

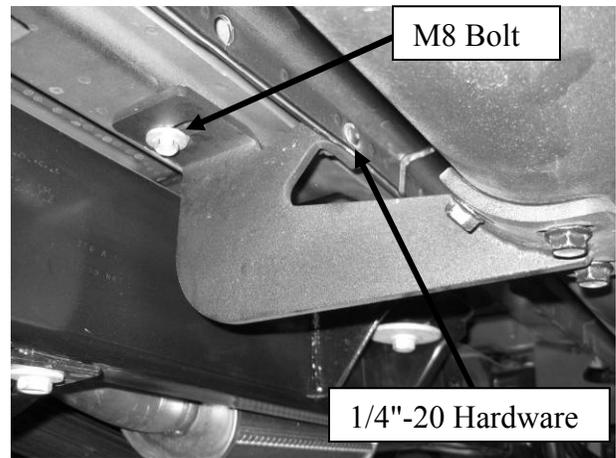


Figure 2

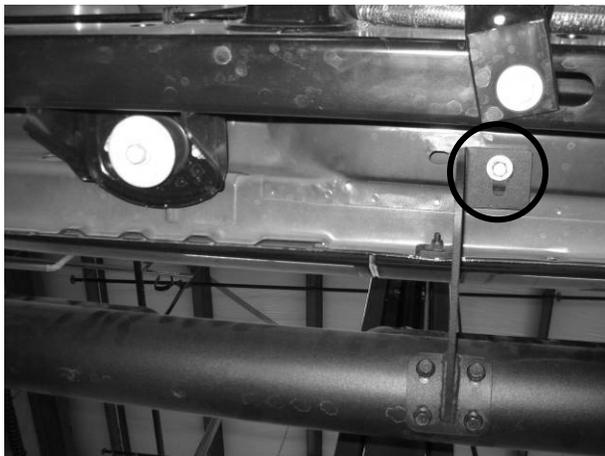


Figure 3

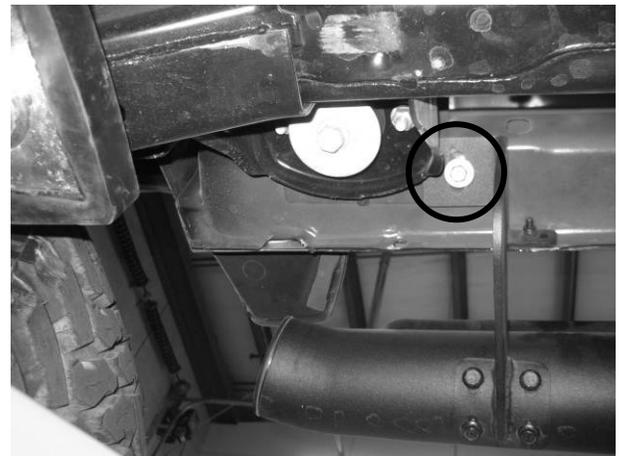


Figure 4



LIMITED 90 Day Limited WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.

03/17/2013