

Step 1
Locate the (2) torx bit screws that hold the sun visor to chassis. While holding the visor, remove the screws then the visor.



Step 2
Using a Phillips head screwdriver, remove the body clip holding the upper A-Pillar trim panel.



Step 3
Remove the upper trim panel, pull the panel down away from the body of the vehicle.



Step 4
Remove the lower trim panel, pull the lower trim away from the body of the vehicle.

REDROCK^{4X4}




Step 5\\

Using a flat screwdriver, gently pry the metal retaining clip off the factory trim panel. Reinstall the factory clip onto the new a-pillar switch panel.



Step 6\\

Using a cutting tool, carefully cut out the number of switch holes need for your application.

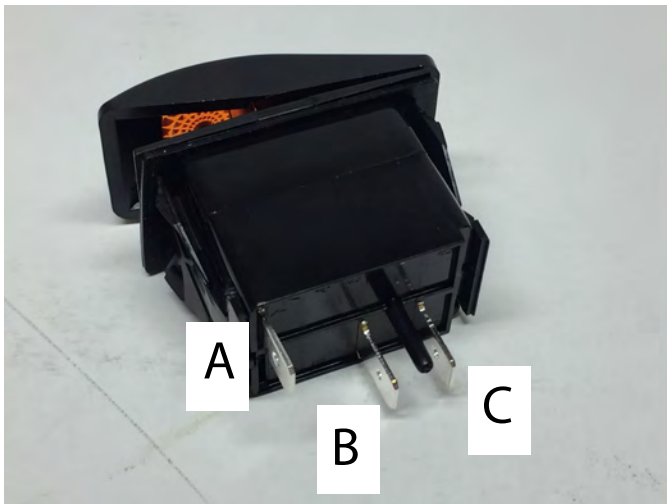

Step 7\\

Wiring:
A- Chassis Ground
B- 12volt + Ignition
C- 12volt + to the accessory



Step 8\\

Reinstall the A-Pillar Switch Panel in reverse order.