REDROCK\$


Installation Instructions

Description: Avenger Front Bumper w/Winch Mount

#	Description	Qty	Specification	#	Description	Qty	Specification
•	bumper	1		4	Spring washer	4	D10
2	Hexagon head bolt	4	M10*40	5	Spring washer	8	D12
3	Hexagon flange nut	8	M12	6	Enlarged washer	4	D10

Installation Steps:

- 1: Check if the accessories are complete
- 2: Install the fixed plate to the pump with hexagon head bolts (M10*40).
- 3: Remove the surrounding and horizontal bars of the original car.
- 4: Use nuts to install the pump into the car.
- 5: Tighten all the bolts.

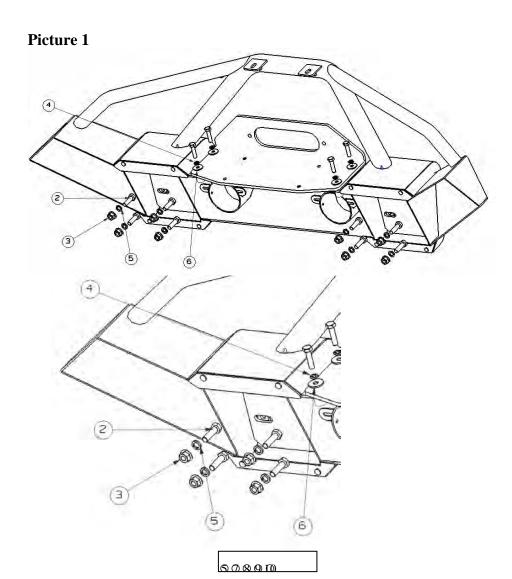

Picture 2

