



Installation Instructions

Description: Stubby Front Bumper w/LED Fog Lights & Winch Mount

#	Description	Qty	Specification	#	Description	Qty	Specification
1	Front Bumper	1		5	Spring Washer	8	D10
2	D-ring	2					
3	Flat Washer	8	D10				
4	Hex Nut	8	M10				

Installation Steps:

- 1. Using a flat head screwdriver, remove the (4) push pins and (2) back side, then remove the lower plastic valance.




- 2. Remove the last two push pins on the upper filler panel and remove.




- 3. With the valance removed, disconnect fog lights wiring harnesses from fog lights if equipped, and remove wiring harness and clips from lower crush zone.



- Use an 18mm socket, and remove the (8) nuts and spacer plates holding the bumper to the front of the frame horns. Be careful when removing the bumper as the factory fog lights will be re-used.

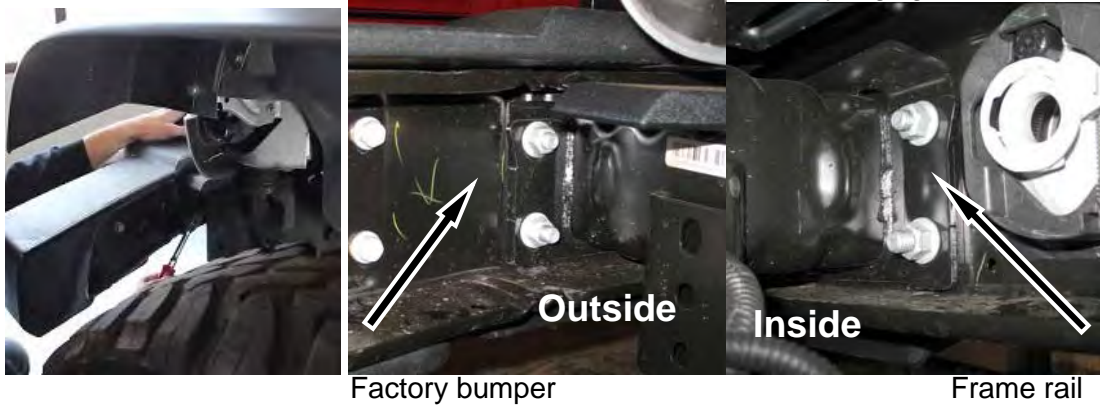

- Slide the Bumper onto the JK, install the screws back onto the bumper, using the supplied (8) 10mm Nuts, (8) 10mm Washer and (8) 10mm luck nuts. Level and adjust bumper, and then tighten all hardware at this time. It is best to use two people when installing the bumper.

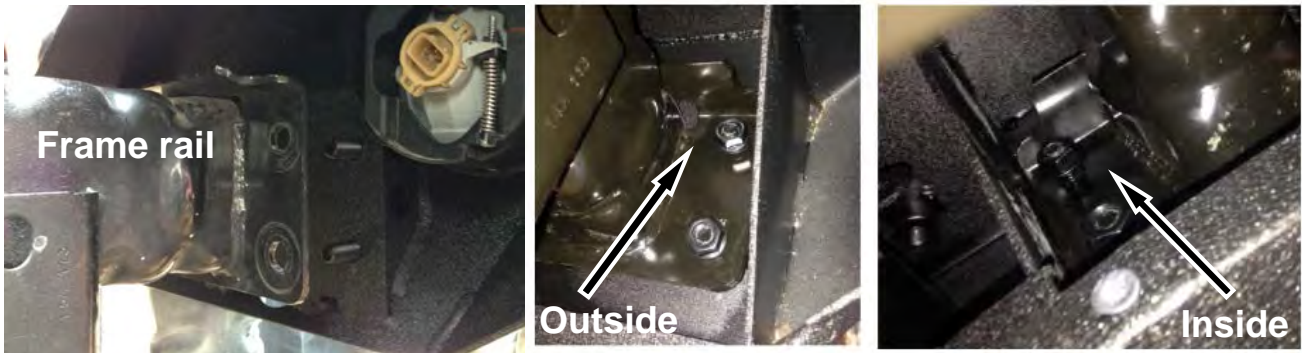

- Connect your light before you drive on the road, if your bumper with LED.
- Do periodic inspections to the installation to make sure that all hardware is secure and tight.



Similar for your reference.