Nert pars tor Iwo Door JK Wranglers

Part numbers that begin with 270,271,560,561

Protect the rockers on your 2007 and newer Jeep Wrangler with these super-strong guards that mount directly to the frame. Installation is easy since no drilling is required and they install using existing mounting hardware.

For assistance please call 800-777-0878

Step 1. Remove the small OEM body mounting bolts that are on the two body mounts, that correspond with the mounting brackets on the nerf bar. Save these bolt for later use. See photo 1.

Step 2. Place nerf bar in position and secure with OEM body mount nuts. It is recommended to use loctite on these nuts. The mounts will be placed similar to photo 2.

Step 3. Once everything is in place, tighten all mounting hardware.



Step 4. After 300 miles or first cifroad trip, re-tighten all mounting hardware and from then on periodically re-tighten hardware.

Extreme double tube nerf bar

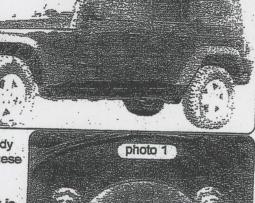


photo 2