

Smittybilt OEM Replacement Top w/ Tinted Windows (07-09 Wrangler JK 4-Door) Installation Guide

Installation Time: 1-2 Hours

Tools Required:

- ✓ Philips screwdriver or drill with Philips bit

Installation Instructions:

1. Lay out the old soft top and new one on the ground.



2. Remove the screw on both sides of the front of the soft top frame.



3. Remove the four screws in the middle of the soft top frame.



4. Remove the four screws in the back of the soft top frame.



5. Flip the soft top forward to expose the header screws.



6. Remove all of the screws holding the soft top into the header.



7. Remove the old soft top.



8. Align the small cut in the middle of the soft top with the line in the soft top frame as shown.



9. Tape the soft top to the soft top frame as shown.



10. Put the plastic piece back on and screw in all the screws taken off in step 6.



11. Reattach the four screws in the rear of the soft top to the frame.



12. Reattach the four screws in the middle of the soft top to the frame.



13. Attach all four soft top screws to the frame of the roll cage.



14. Flip the soft top up and attach the soft top frame to the clip on the door surrounds.



15. Flip the soft top over the driver and passenger seat and clip the two header clip to the window frame.



16. Pull down the rear of the soft top and push the plastic piece into the body rail.



17. Zip the window a few inches and then fold the plastic piece into the door surround.




18. Finish zipping the window and fasten the Velcro.



19. Zip the rear window up and slide the tailgate bar into the bottom of the window.



20. Attach the end of the tailgate bar into the brackets on each end of the tailgate.

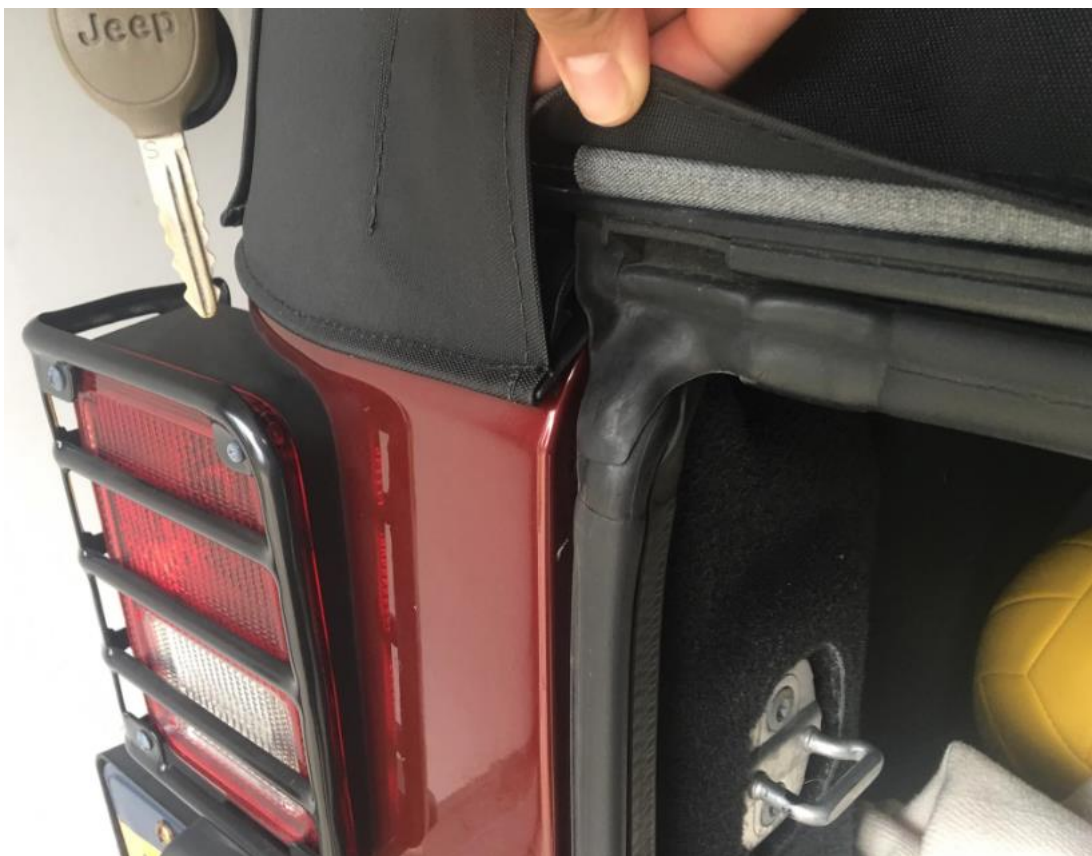

Installation Instructions Written by ExtremeTerrain Customer Thomas Sandoval 07/04/2017