

# BARRICADE

OFF - ROAD ARMOR

Barricade Replacement Bumper Installation Instructions (07+ Wrangler 2 & 4 Door)



# Barricade Rock Crawler Rear Bumper Installation Instructions (07-13 Wrangler 2 & 4 Door)

## TOOLS REQUIRED

- 13mm-19mm Sockets
- 13mm-19mm Wrenches
- Allen Key Set (Metric)




**STEP 1** // Remove the rear tire and the (8) 13mm bolts holding the tire carrier to the tailgate.



**STEP 3** // Remove the (4) 15mm bolts securing the rear bumper.



**STEP 2** // Disconnect the third brake light harness, which can be accessed through the rear panel of the tailgate.

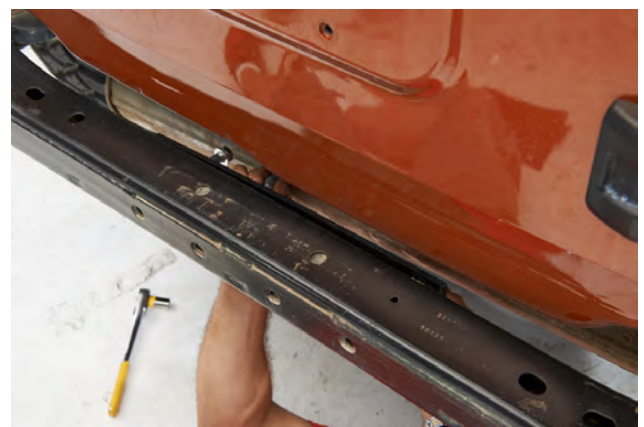

**STEP 4** // Install the mounting bracket to the inner side of the rear bumper support beam, slide the bolts through, leaving the nuts off.



**STEP 5 //** Next, slide the L-Shaped mounting brackets into the frame rails with the nut backing up to the predrilled hole in the frame.



**STEP 8 //** Using the supplied nuts, install the center support and tighten.



**STEP 6 //** Slide your new rear bumper over the brackets and bolts set in place in the previous steps.



**STEP 9 //** Install the swing arm by sliding it over the post on the bumper. \*Note it may help to grease the post for smoother operation.



**STEP 7 //** Thread the (4) supplied bolts into the side bumper supports and tighten.



**STEP 10 //** Install the top cap then secure it with the supplied allen-head bolt.



**STEP 11** // Slide the latch into the end of the swing arm and secure with the two bolts and nuts.



**STEP 13** // Finally, install the rear tire carrier and secure it to the rear swing arm at the desired height using the supplied hardware.