

Barricade Heavy Duty Front Bumper Installation Instructions (07-13 Wrangler 2 & 4 Door)

TOOLS REQUIRED

- Flathead Screwdriver
- Phillips Screwdriver
- 15mm-19mm Sockets
- 15mm-19mm Wrench



STEP 1 // Remove the 6 pins holding the splash guard onto the vehicle




STEP 3 // Remove the 2 push pins holding the top cover onto the vehicle



STEP 2 // Next, unplug the factory fog lights and loosen the (8) 19mm nuts holding the front bumper to the support beam of the vehicle.



STEP 4 // To remove the fog lights, loosen the 4 phillips screws on each light.

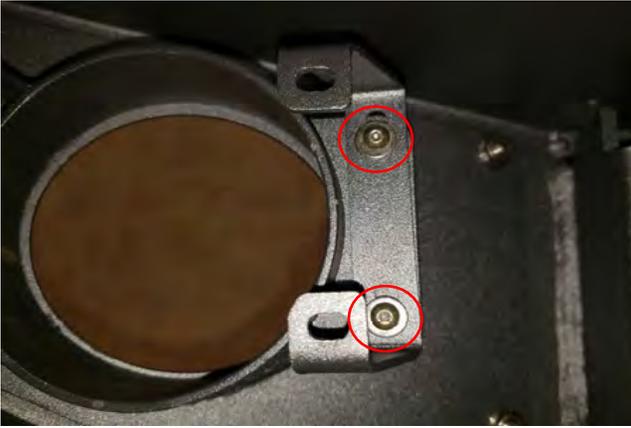

STEP 5 // Install the supplied bracket to the barricade bumper and then install the fog lights onto the bracket and bumper by using the supplied M4 hardware.



STEP 6 // Slide the bumper in place. Using the supplied washers and nuts, secure the bumper to the frame.



STEP 7 // Route the fog light wiring above the frame rail and plug it back into the fog light housing.

BARRICADE

OFF-ROAD ARMOR

Barricade Replacement Bumper Installation Instructions (07+ Wrangler 2 & 4 Door)

