



Barricade Replacement Bumper Installation Instructions (87-06 Wrangler)

Barricade Classic Rear Bumper Installation Instructions (87-06 Wrangler)

TOOLS REQUIRED

- 13mm-19mm Sockets
- 13mm-19mm Wrenches
- Allen Key Set (Metric)
- Torx Bit Set




STEP 1 // Remove the rear tire and the (4) 13mm bolts securing the tire carrier.



STEP 3 // Using an 18mm socket, remove the (4) bolts securing the rear bumper.



STEP 2 // Remove the Torx screws, on the top and bottom, holding the end caps on the rear bumper and remove them.

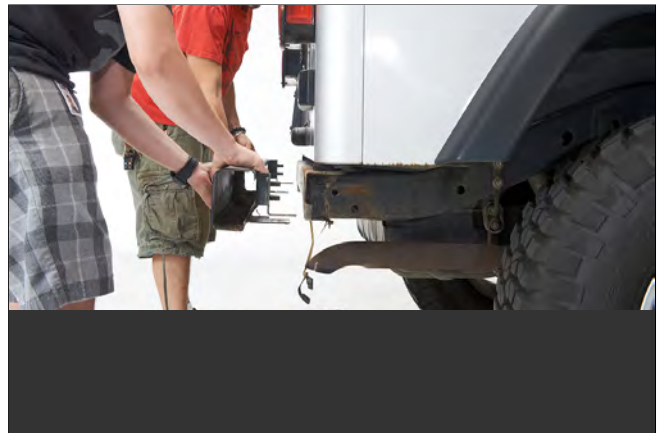

STEP 4 // Slide the bumper away from the back of the vehicle.



STEP 5 // Using the supplied brackets and 18mm hardware, mount them to the vehicle in the factory mounting holes as pictured.



STEP 8 // Using the 18mm supplied bolts, washers and nuts, install the rear bumper onto the vehicle, leaving it loose for adjustment.



STEP 6 // Slide the new bumper into position on the mounting brackets and line the 4 holes on the top of the bumper up with the 4 holes on the mounting plates.



STEP 9 // Once it is in place and centered, tighten all the bolts.



STEP 7 // You may have to remove the plate bracket for extra clearance. Using a 10mm socket, remove the plate holder.



STEP 10 // Install the swing arm by sliding it over the post on the bumper. *Note it may help to grease the post for smoother operation.



STEP 11 // Install the top cap and secure it using the hex bolt.



STEP 12 // Slide the latch assembly into the swing arm and secure using the 17mm bolts and nuts.



STEP 13 // Finally, install the rear tire carrier onto the rear swing arm using the (4) 18mm bolts and nuts and tighten them down. Then, reinstall the rear tire.